

OUTILS MANUELS DE POSE INTERVIS®

MANUL SETTING TOOL FOR INTERVIS®



SUR QUELLES INTERVIS® L'UTILISER ?

For which InterVis® to use this tool ?

- > InterVis® de M2,5 à M16.
InterVis® from M2,5 to M16.

POUR QUELS UTILISATEURS ?

for which users ?

- > Techniciens monteurs.
Assembly technician.

COMMENT UTILISER L'OUTIL ?

How to use the tool ?

- 1 Visser l'InterVis® sur l'outil fente vers le bas.
Choose a stud adapted to the tapping of the pin and screw it onto the extractor axis.
- 2 Positionner l'ensemble sur le trou et visser l'InterVis® jusqu'à environ 0,1 à 0,2 mm en dessous de la surface de la pièce. En cas d'effort trop important lors de l'insertion utiliser un "tourne à gauche".
Screw the InterVis® into the hole down approximately 0.1 to 0.2mm, and use a wrench in case of insistence.
- 3 Unlock the nut with a latch key and unscrew until it ejects from the InterVis®.

Outil
Tool



Photo non contractuelle

1



2



3

